


# 4-link suspension kit


- 1) Use the M3x20mm screws to attach the links to the chassis through the carbon plates.

Add a thin washer between the rod end and the carbon plate.

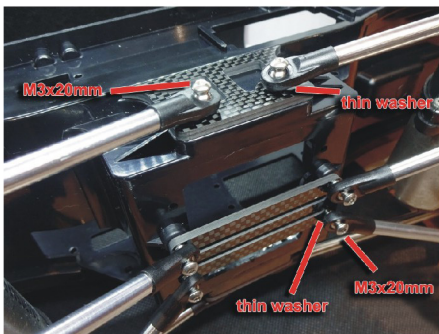

- 2) Make sure all screws are loosely in place before tightening down.

Use the M3 locknuts, add a thick washer to the back of the side mounts.

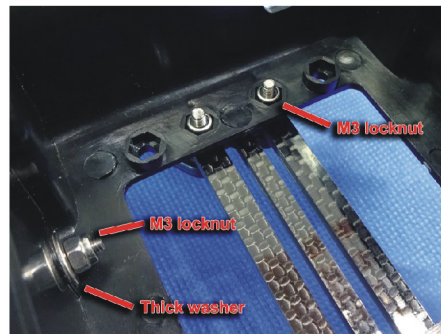


4 links have aligned rod ends for the side plates. 4 are off-set for the lower links.

- 3) Use the M3x16mm screws to attach the links to the lower link mounts on your axles.

Add a thin washer between the rod end and the carbon plate.

The gearboxes may be tilted in or out depending on the ride height, fine adjustments can be made by moving the links up or down a hole on the lower link mounts on the axle.

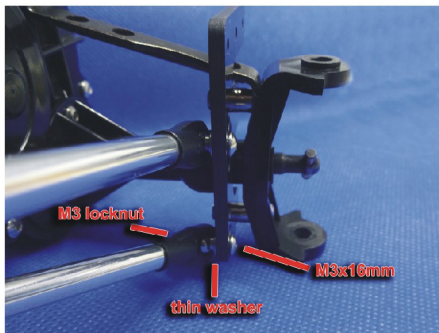

[www.facebook.com/UKMonsters](https://www.facebook.com/UKMonsters)

Find us on  
**Facebook**

[www.ukmonsters.co.uk/clodshop](http://www.ukmonsters.co.uk/clodshop)