


Stock Plus

V1.0

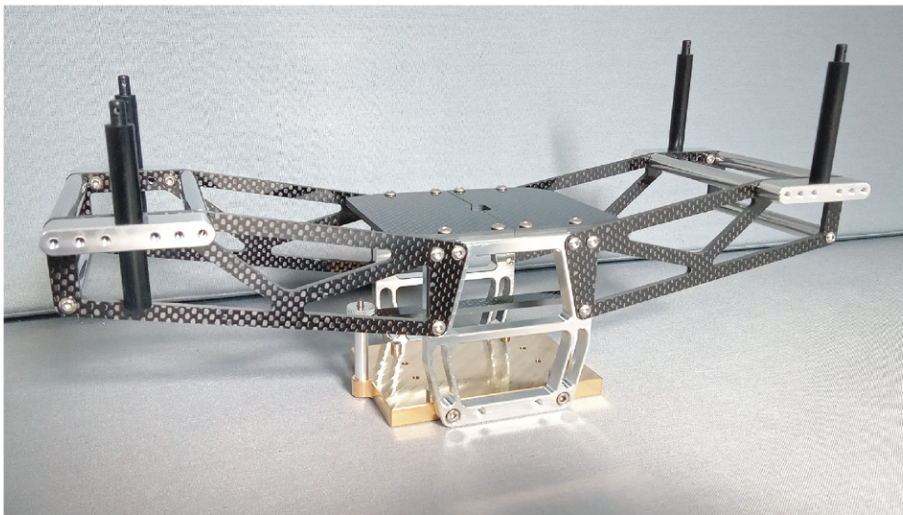

Assembly Guide

High quality custom CNC machined carbon and aluminium replacement chassis to fit Tamiya Clodbuster gearboxes and stock suspension.


ukmonsters.co.uk

Bag 1


4x




Fit the M3 x 6mm cap screws into the top of the brass plate.

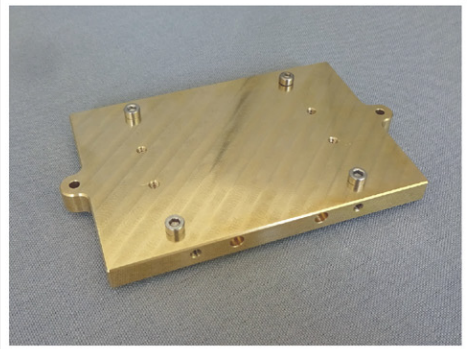

2x

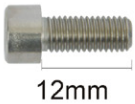


Attach the battery spacer tubes with the M3 x 12mm cap screws.

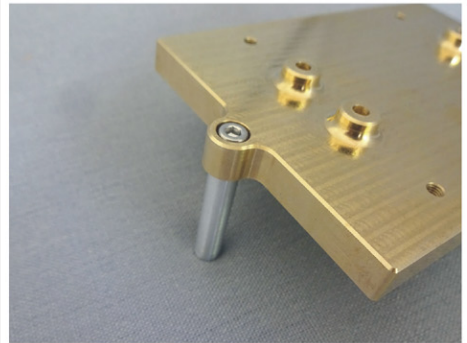


2x



Tighten the 20mm grub screws into the spacer tubes.

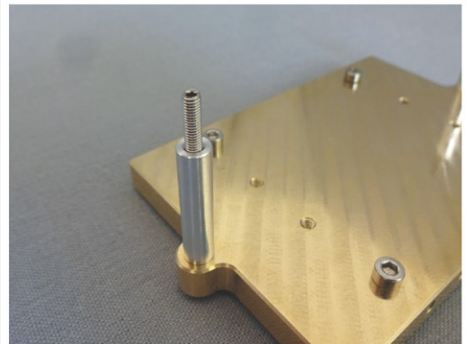

An adhesive foam strip is included to fit under the carbon hold down strap. Secure the strap in place with the thumbwheels.

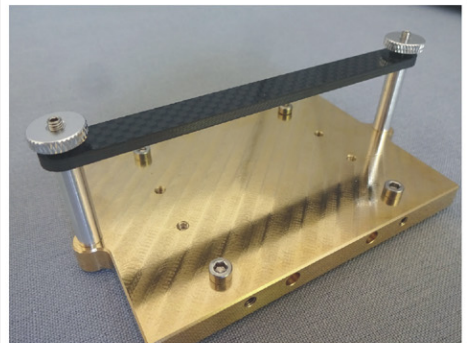


Bag 2

12x




Attach the carbon arms to the chassis sides using the M3 x 8mm button screws.

Make 2 of these.

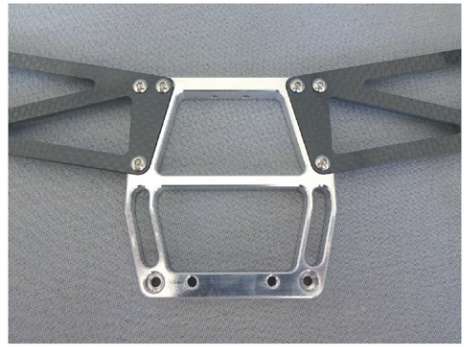


4x

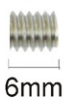


Fit the 6mm grub screws into the suspension mounts.

Make sure they don't block the body post holes.

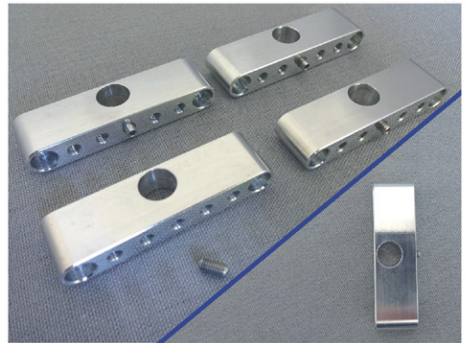

4x

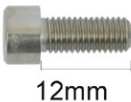

12mm

2x



12mm

Attach all 6 of the 8mm chassis bars, 3 at each end using M3 x 12mm cap screws for the top and M3 x 12mm button screws for the lower.



4x



8mm

Attach 2 of the suspension mounts with the grub screw facing inwards.




Bag 3

2x



12mm

Fit the chassis side to the brass plate with M3 x 12mm cap screws

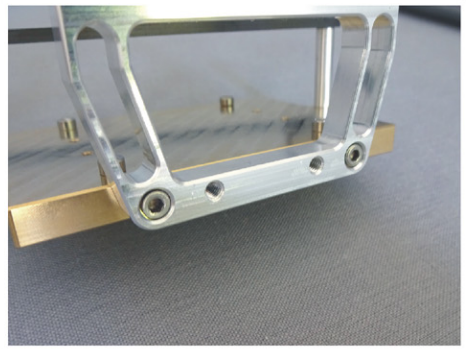


2x



12mm

Repeat this for the other side.

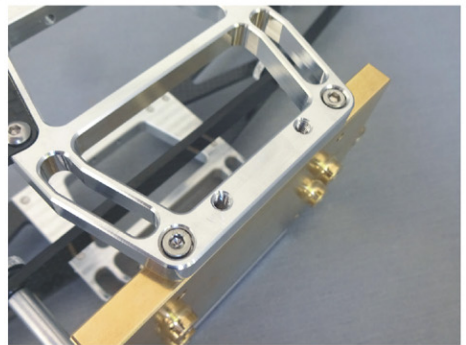

4x




12mm

2x



12mm

As on the other side, use the M3 x 12mm cap screws for the top and M3 x 12mm button screws for the lower chassis bars.

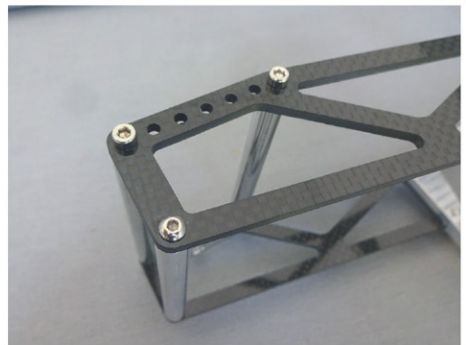


4x




8mm

Attach the last 2 suspension mounts with the M3 x 8mm button screws.

Attach loosely as access is difficult.

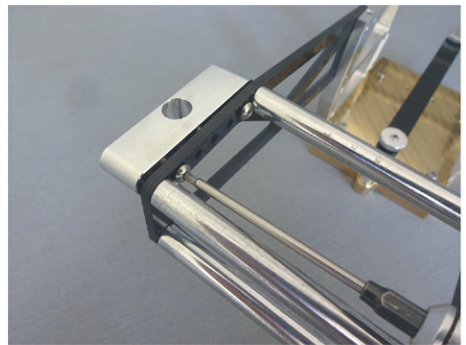


Driver access is hampered so tighten with a 2.5mm allen key.

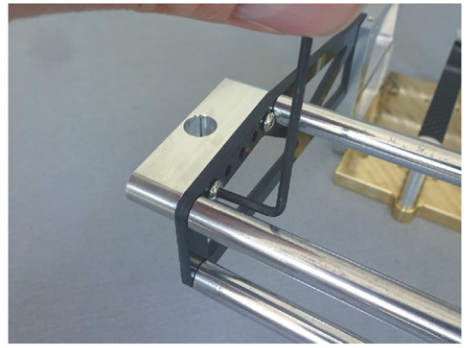


Attach the upper deck with M3 x 8mm button screws.

Wiring can be routed through the centre hole.

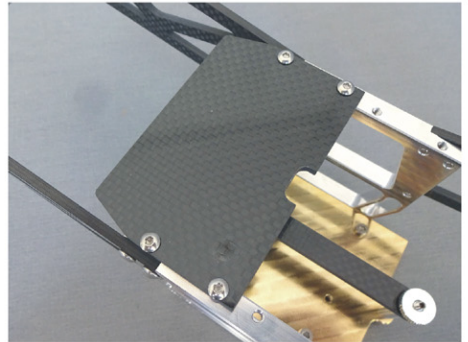


The remaining upper deck can be fitted to capture the ESC wiring.

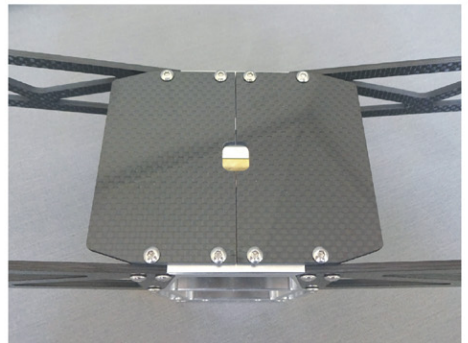


Bag 4

The body posts are locked in place by tightening the grub screws with a 1.5mm allen key.

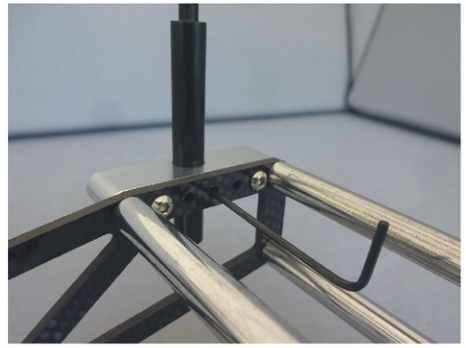

The posts can be used with traditional body clips or turned upside down to use thumbscrews.

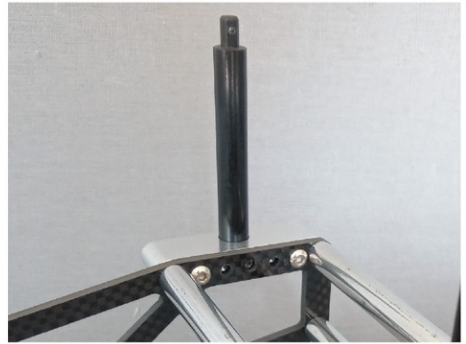

4x




16mm

For the thumbscrews fit the M3 x 16mm grub screws into each body post.



Mount each body post and set the body height.

The posts can be cut down or left at full length.

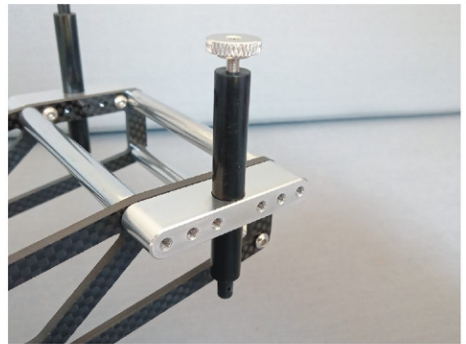

8x



12mm


Use the M3 x 12mm cap screws to attach the shocks.



The Stock Plus chassis has the same suspension mounting points as the original plastic tub. You will need the ball joints from the original chassis to mount your gearboxes and ladder bars.

The body posts are located in the original positions, the original Clodbuster body will fit as before once the body post height is set.

The Chassis can only accommodate a shorty Lipo battery. Dimensions can be a maximum of 28mm(H) x 47mm(W) x 98mm(L)

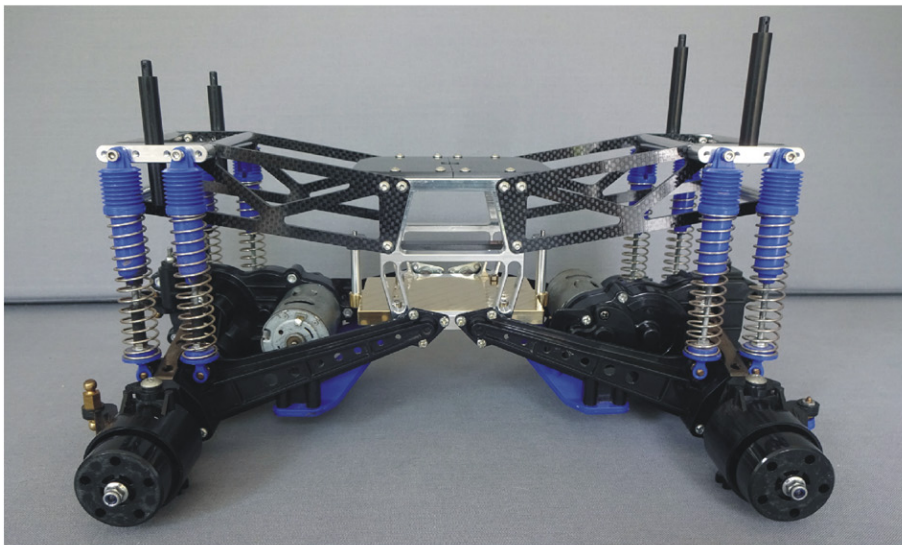

ukmonsters.co.uk