


Lunchbox Servo mount


1)

Attach servo to the mount with the 10mm button screws and thin washers. Make sure the servo is tight against the central beam

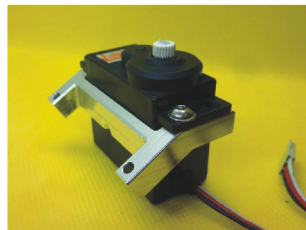


2)

Fit the servo mount in the chassis using 10mm button screws and thin washers as shown.

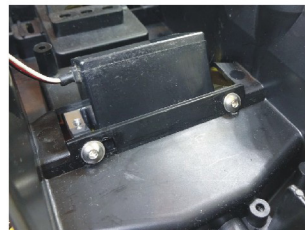


3)

Make sure the servo mount is sitting flat against the chassis

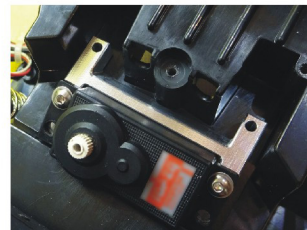


4)

Put a 3mm drill through the mounting holes and mark the chassis where to drill.

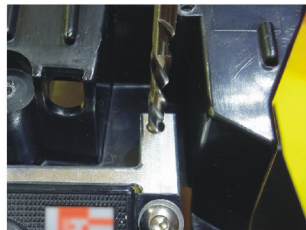


5)

Remove the mount and drill the 3mm holes through the chassis.

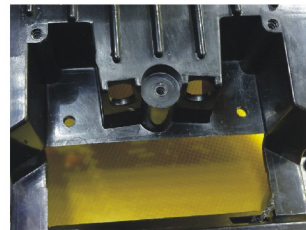

6)

Refit the servo mount, then put the 16mm button screws with thick washers through from the top of the chassis.

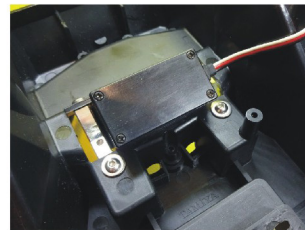

7)

Add the thin washers and locknuts to the bottom of the mount and tighten.

